



# VW Golf MK7 GTI Res Delete (ES-VW08 RDP) Installation Instructions

**XFORCE RECOMMENDS AN AUTHORISED PROFESSIONAL TO INSTALL ALL PRODUCTS**

**WARNING:** When working on any vehicle exercise extreme caution. Please allow the vehicles exhaust system to be cool enough to touch before removal. Failing to do so may result in severe burns. If working without a hoist refer to the vehicles manual to check correct lifting specifications. Always wear safety glasses, protective gloves and ensure your working in a safe area. Serious injury or death can occur if the correct safety measures are not followed.

**Attention:** Please read the instructions carefully. XFORCE will only warrant manufacturing faults. This does not extend to damage or breakage due to incorrect fitment.



## Part Number List

1. ES-VW08 RDP
2. 1 X Clamp



## Required Tools and Equipment


1. Spanners and Sockets required 13mm, 15mm
2. 3/8" Ratchet
3. 6" long 3/8 Extension bar
4. Razor blade/box cutter
5. Can of spray lubricant
6. Tube of O2 Sensor safe sealant for the 2 bolt Gasket and Slip Joint
7. 2-3 Rags for excess sealant
8. Safety Glasses or Goggles
9. Protective Gloves
10. Safety Boots



## Step 1

**The entire fitting process must be conducted by a professionally trained technician (this also includes hoist operation).**

Raise vehicle on a 2 post hoist making sure hoist arms are in the correct lifting positions (as per owners manual) and that you or someone else isn't under the vehicle while hoist is moving. Once the Vehicle is at a workable height engage the hoist safety locks.

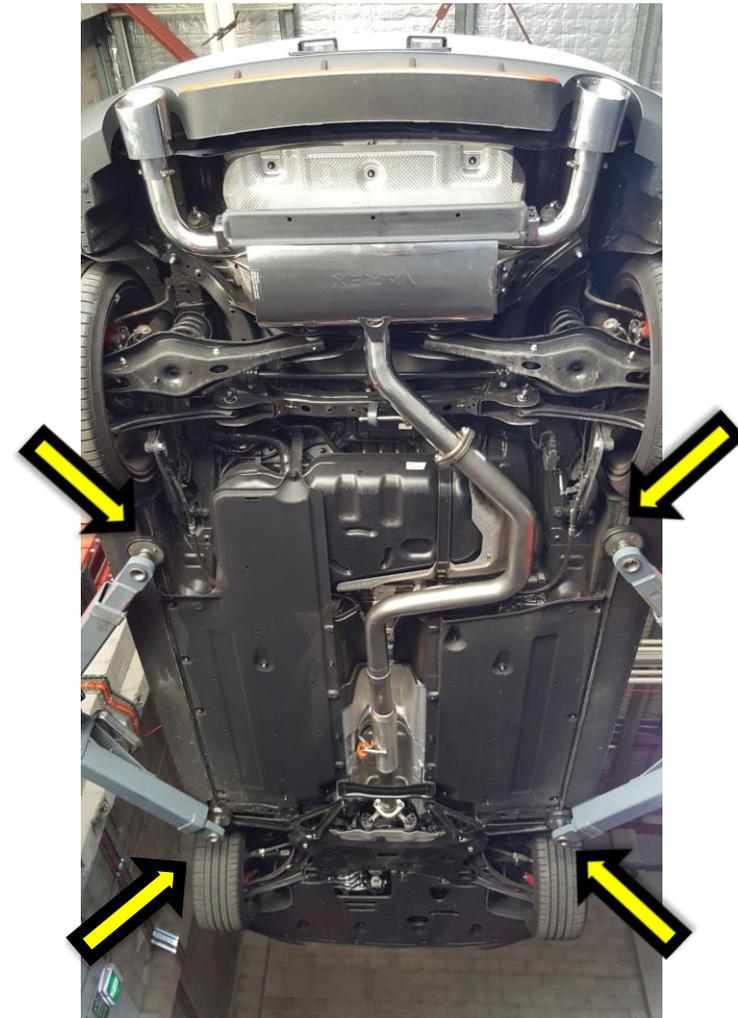



## Step 2

Remove the 4 x 13mm nuts and then remove the support brace.





## Step 3

Position the VW08 RDP over the resonator making sure the hanger lines up with the rubber. Mark the end of the pipe and measure forward 55mm and mark the cut line. Using an air saw or Chain Pipe cutter cut on the line marked cut. The Xforce RDP will slide over the factory pipe at the cut point.





## Step 4

Unbolt the factory Slip joint Clamp in front of rear wheels (13mm) and slide the clamp forward then remove the resonator.





## Step 5

Slide the Xforce clamp over the slip flare then O2 sensor safe sealant (as per diagram) slide the RDP over the factory pipe at the rear, slide the hanger into the rubber, lift the front of the pipe in place and slide the factory clamp over the xforce pipe. Tighten the clamps and enjoy the sound of your GTI

